

Wall Exhaust Shutter Fans

XFS SERIES

Designed for use in garages, sheds, workshops and more.



Canarm's XFS series wall exhaust fans are ideal for commercial applications. They feature smooth, quiet, reliable, maintenance free operation.

Available in 12" to 36" sizes - fans are single, 2 or 3 speeds with OFF and come complete with a 9' cord and grounded plug.

The fans have a durable steel construction with powder coat black finish and quiet, aluminum shutters with tie bar to maximize airflow.

Installation is easy - simply mount the fan with 4 screws, plug it in and turn it on!

FEATURES

- Smooth, quiet, reliable, maintenance free operation.
- Available in 12" to 36" sizes.
- 12" and 16" models are 3 speed
- 20" to 30" models are 2 speed.
- 36" model is single speed.
- Durable steel construction with powder coat black finish.
- Swept back, high efficiency, low noise blade design.
- Shutters have a small magnet to prevent flapping and provide a superior seal.
- Quiet, aluminum shutters with tie bar to maximize airflow.
- Strong powder coated OSHA guarding inside.
- ETL certified
- Euro design outside rotor motor for higher efficiency.
- Totally enclosed with sealed ball bearings
- Pull chain speed control
- 9 foot cord with 115 volt, 3-prong plug
- Fans shipped totally assembled.




TIE BAR ALUMINUM SHUTTERS



PULL CHAIN SWITCH

ACCESSORIES

Optional galvanized weather hood.

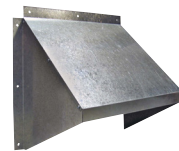

AIR CHANGES PER MINUTE

Application	Minutes per Air Change	Application	Minutes per Air Change
Assembly Hall	7	Church	15
Attic	2	Classroom	6
Auditorium	10	Dance Hall	5
Barber Shop	6	Department Store	6
Basement	8	Dry Cleaning	5
Battery Room	4	Engine Room	6
Boiler Room	1	Factory	6
Bowling Alley	5	Forge Room	3
Foundry	4	Pressing Room	1
Garage	5	Projection Booth	2
General Office	10	Summer Cooling	1
Gymnasium	8	Toilet	3
Laundry	2	Transformer Room	1
Locker Room	3	Warehouse	12
Machine Shop	8	Welding Shop	2
Plating Room	3		

To determine the proper fan for your applications, use the following formula.

Number of cubic feet in room

Number of minutes per air change

= Required CFM Capacity

EXAMPLE: A general office, (see chart) which requires an air change every ten minutes, would require the following fan capacity.

If the office is 100' x 40' x 10' = 40,000 cubic ft
 40,000 cubic ft / 10 minutes per air change = 4000
 Required CFM

From the chart, you would select a fan that is rated at 4000 CFM at 1/8" S.P. (Static Pressure)

OPTIONAL WEATHER HOOD


FAN SIZES	HOOD #
12"	GH-XF12
16"	GH-XF16
20"	GH-XF20
24"	GH-XF24



XFS SERIES Wall Exhaust Shutter Fans


PERFORMANCE SPECIFICATIONS

MODEL	FAN SIZE	MOTOR HP	SPEED	VOLTS	NET WEIGHT	FAN RPM	CFM at 1/8" SP	HIGH SPEED SOUND LEVEL dB(A)	MAX AMPS	MAX AMBIENT TEMP
XFS12	12"	1/12	3	115	19 lbs	1600/1420/1150	1100/900/800	58	0.8 / 0.8 / 0.7	90°C/194°F
XFS16	16"	1/8	3	115	27 lbs	1630/1450/1330	2300/2000/1800	58	2.0 / 1.8 / 1.6	74°C/158°F
XFS20	20"	1/4	2	115	40 lbs	1140/1050	3300/2900	68	2.3 / 2.0	70°C/158°F
XFS24	24"	1/2	2	115	56 lbs	1140/1070	4700/3800	72	5.0 / 4.3	70°C/158°F
XFS30	30"	1/2	2	115	72 lbs	1080/980	5200/4100	71	4.9/4.3	70°C/158°F
XFS36	36"	1	1	115	88 lbs	943	6339 FEI: 1.1	76	7.2	70°C/158°F

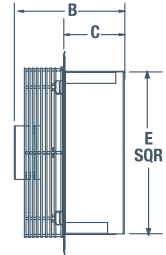

DIMENSIONS

MODEL	A X A SQUARE	B	C	D (c/c)	E SQR	N (# OF LOUVRES)	FRAMING	CARTON DIMENSIONS		
								Length	Height	Width
XFS12	17"	8 3/4"	5"	15"	13 7/8"	3	14-1/8" x 14-1/8"	20"	20"	12"
XFS16	21"	9 7/8"	5 1/8"	18 3/4"	17 11/16"	4	17-15/16" x 17-15/16"	25"	25"	13"
XFS20	25"	10"	5 1/8"	22 7/8"	21 11/16"	5	21-15/16" X 21-15/16"	28"	28"	13"
XFS24	28 7/8"	11 1/3"	5 1/8"	26 11/16"	25 5/8"	6	25-7/8" X 25-7/8"	32"	32"	15"
XFS30	34 3/4"	12 1/8"	5 1/8"	32 5/8"	31 1/2"	7	31-3/4" X 31-3/4"	38"	38"	17"
XFS36	40 5/8"	13"	5 1/5"	38 1/2"	37 1/2"	8	37-3/4" X 37-3/4"	44"	44"	17"

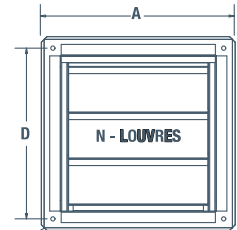


Note: Dimensions subject to change


ATTIC VENTILATION

CAUTION!

Attic temperatures can get very high and exceed the high temperature protection device, shutting down the fan if there is not enough air change to keep the attic at a temperature below 120 °F.

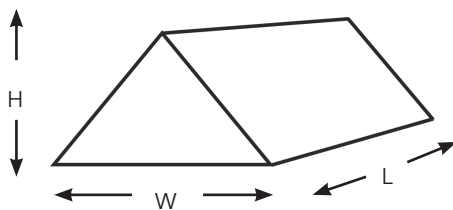

$$\text{GABLED ROOF VOLUME} = L \times W \times \frac{1}{2} H$$

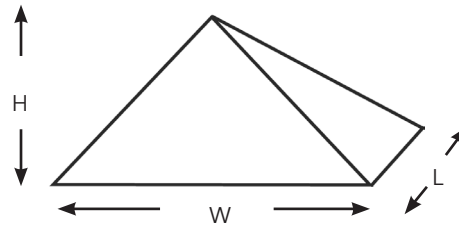

$$\text{PYRAMIDAL ROOF VOLUME} = L \times W \times \frac{1}{3} H$$

Recommended air changes in an attic are about 2-3 minutes per air charge (MIN/AC) to keep the temperatures down. (2 minutes in southern climates and 3 minutes in northern climates.)

$$\text{Using 2 minutes, required exhaust CFM} = \frac{\text{Total Volume}}{2 \text{ MIN/AC}}$$

This provides your required CFM of the exhaust fan, BUT there must be enough venting to supply fresh air to the attic space. A good rule of thumb is 1.5 ft² for every 1000 CFM of airflow.

Example:

$$\text{Southern Climate} \quad \frac{6000 \text{ ft}^3}{2} = 3000 \text{ CFM} \quad \text{Use XFS20}$$


$$\text{Southern climate inlet opening} = 3000 \times \frac{1.5}{1000} = 4.5 \text{ ft}^2$$

$$\text{Northern Climate} \quad \frac{6000 \text{ ft}^3}{3} = 2000 \text{ CFM} \quad \text{Use XFS16}$$

$$\text{Northern climate inlet opening} = 2000 \times \frac{1.5}{1000} = 3 \text{ ft}^2$$




Options & Accessories Wall Exhaust Fan Hoods

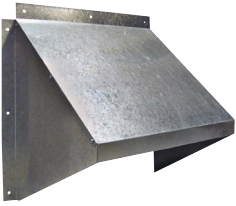

GH GALVANIZED HOODS

- Economical shipping.
- Easy to assemble, galvanized hood.
- No screens.

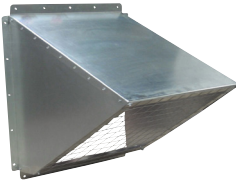


GH KNOCK DOWN HOODS

- Easy to assemble, galvanized hood.
- Includes bird screen.




WHA HOODS

- For AX fans.
- Shipped fully assembled.
- 18 gauge galvanized weather hoods complete with bird screen.
- Optional insect screen available. Consult factory.

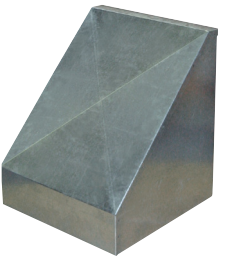

WHP HOODS

- For Panel fans.
- 18 gauge galvanized weather hoods complete with bird screen.
- Optional insect screen available. Consult factory.

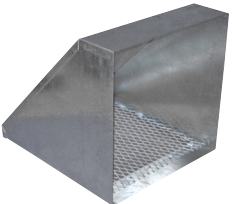

INTAKE & EXHAUST HOODS

- Shipped fully assembled.
- 18 gauge galvanized weather hoods complete with bird screen.



PLASTIC HOODS

- Rugged, grey plastic hood.
- No screens.

HOOD MODEL	DIMENSIONS		APPROX. WEIGHT (LBS)	FANS THAT WILL FIT
	INSIDE DIMENSIONS	OUTSIDE DIMENSIONS		
GH GALVANIZED HOODS				
GH-XF12-M	14.75"W X 14.0"H	18"W X 15.75"H	4	XF12 / XB12 / SD8 / SD10 / AX8 / AX10 / AX12
GH-XF16-M	18.75"W 17.75"H	22"W X 19.75"H	7	XF16 / XB12 / HV12 / HVA12 / ADD12 / DDP12 / DDS12 / SD12-14 / AX14-16
GH-XF20-M	22.75"W X 22"H	26"W X 23.75"H	9	XF20 / XB14 / XB16 / HV14-16 / HVA14-16 / ADD14-16 / DDP14-16 / DDS14-16 / SD16-18 / AX18-20
GH-XF24-M	26.75"W 26"H	29"W X 27.25"H	12	XFS24
GH KNOCKDOWN HOODS				
GH-KD24	31.65"W X 31.66"H	34.65"W X 34.69"H	31	XB24 / HV24 / HVA24 / ADD24 / DDP24 / DDS24 / SD24 / AX24
GH-KD36	43.62"W X 43.93"H	46.62"W X 46.82"H	75	XB30-36 / HV30-36 / HVA30-36 / ADD30-36 / DDS30-36 / SD30-36 / AX30-36 / AX42
GH-KD48	55.62"W X 55.25"H	58.62"W X 58.82"H	TBA	XB42-48 / HV42-48 / HVA42-48 / ADD42-48 / DDS42-48 / SD42 / AX42
GH-KD60	69.76"W X 69.92"H	72.76"W X 72.95"H	TBA	XB54-60 / HV54-60 / HVA54-60 / ADD54-60
WHA HOODS				
WHA8-10	12.11"W X 12.11"H	-	13	AX08-10, SD8
WHA12	14.05"W X 14.05"H	-	16	AX12, SD10
WHA14	16.11"W X 16.11"H	-	22	AX14, SD12
WHA16	18.11"W X 18.11"H	-	26	AX16, SD14
WHA18	20.11"W X 20.11"H	-	29	AX18, SD16
WHA20	22.05"W X 22.05"H	-	31	AX20, SD18
WHA24	26.05"W X 26.05"H	-	47	AX24
WHA30	33.05"W X 33.05"H	-	59	AX30
WHA36	39.11"W X 39.11"H	-	76	AX36
WHP HOODS				
WH8-10P	14.45"W x 14.45"H	-	20	P08 / P10
WH12P	17.40"W X 17.40"H	-	16	P12
WH14P	19.20"W X 19.20"H	-	24	P14
WH16P	21.20"W X 21.20"H	-	26	P16
WH18P	23.20"W X 23.20"H	-	29	P18
WH20P	25.20"W X 25.20"H	-	44	P20
WH24P	29.15"W X 29.15"H	-	44	P24
WH30P	35.65"W X 35.65"H	-	60	P30
WH36P	41.65"W X 41.65"H	-	77	P36
EXHAUST / INTAKE / WEATHER HOODS				
EH12	16.55"W X 16.55"H	-	9	XF12 / SD8-12 / AX8-14 / XB12 / HV12 / HVA12 / ADD12 / DDP12 / DDS12
EH14	18.60"W X 18.60"H	-	15	XB14 / HV14 / HVA14 / ADD14 / DDP14 / DDS14 / SD14 / XF16 / AX16
EH16	20.60"W X 20.60"H	-	20	AX18 / SD16 / XB16 / HV16 / HVA16 / ADD16 / DDP16 / DDS16
EH18	22.55"W X 22.55"H	-	31	SD18 / XB18 / HV18 / HVA18 / ADD18 / DDP18 / DDS18 / XF20 / AX20
EH20	24.55"W X 24.55"H	-	44	SD20 / XB20 / XF24 / HV20 / HVA20 / ADD20 / DDP20 / DDS20
EH24	30.05"W X 30.05"H	-	60	SD24 / AX24 / XB24 / ADD24 / HV24 / HVA24 / DDP24 / DDS24
EH30	36.35"W X 36.35"H	-	72	SD30 / AX30 / XB30 / HV30 / HVA30 / ADD30 / DDS30 / JFHVA24
EH36	42.30"W X 42.30"H	-	104	SD36 / AX36 / XB36 / HV36 / HVA36 / ADD36 / DDS36 / JFHVA30
EH42	48.63"W X 48.63"H	-	163	XB42 / HV42 / HVA42 / ADD42 / DDS42 / JFHVA36 / SD42 / AX42
EH48	54.64"W X 54.64"H	-	TBA	XB48 / HV48 / HVA48 / ADD48 / DDS48 / JFHVA42
EH54	61.20"W X 61.20"H	-	TBA	XB54 / HV54 / HVA54 / ADD54 / JFHVA48
EH60	69.39"W X 69.39"H	-	TBA	XB60 / HV60 / HVA60 / ADD60
PLASTIC HOODS				
HFP-18G	21.50"W X 21.75"H	-	9	S8 / S10 / S12 / S14 / S16 / S18V / AX08 / AX10 / AX12 / AX14 / AX16 / AX18
HFP-24G	27.50"W X 27.75"H	-	13	S20 / S24 AX20 / AX24